

APX500 QUICK START-UP GUIDE

QUICK GUIDE FOR FILLING & HEATING

1: FILL WITH FRESH TAP WATER

WARNING: TAP WATER ONLY

- Fill the filler bottle with water.
- Push down and twist to unscrew the pressure cap (A).
- Insert the tip of the filler bottle into the pressure cap opening and push down.
- After filling (takes two bottles of water), reinstall cap.

2: ATTACH THE STEAM HOSE/WAND

- Lift open the safety cover on the Steam Gun Socket (B).
- Insert the steam gun plug into the open socket.
- Gently pull the steam gun plug to ensure that it is securely in place.

3: PLUG THE POWER CORD (C) INTO A 3-PRONG OUTLET - 120VAC, 15AMP

WARNING: If an extension cord is used, it must be 3-prong with ground, at least 12AWG, and NO longer than 25ft

4: SWITCH THE (MAIN) ON/OFF SWITCH (D) TO THE ON (“O”) POSITION


- An amber LED inside the (Main) ON/OFF Switch (D) will illuminate, indicating that the generator is active.

5: SWITCH THE (HEATER) ON/OFF SWITCH (E) TO THE ON (“O”) POSITION

- An amber LED inside the (Heater) ON/OFF Switch (E) will illuminate, indicating that the generator is heating up.
- After approximately 12-14 minutes, the unit will be up to maximum pressure and the Green (Ready) Light (F) will be illuminate.

6: BLEED THE STEAM LINE BEFORE USE

- Point the Steam Gun in a safe direction and hold both pressure switches on the steam gun for about 30 seconds and then release.
- Allow the Green (Ready) Light (F) to illuminate again, **NOW THE GENERATOR IS READY TO USE.**

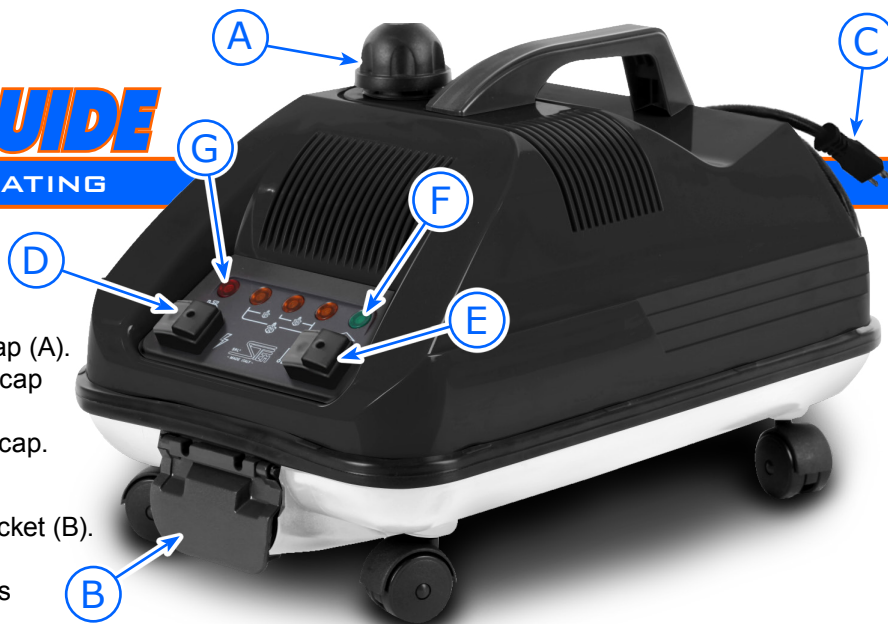

QUICK GUIDE FOR REFILLING THE GENERATOR

When the generator runs out of water, the Red (Out of Water) Light (G) will illuminate and beep, indicating low water.

A: SWITCH THE (HEATER) ON/OFF SWITCH (E) TO THE OFF “—” POSITION

- The amber LED inside the (Heater) ON/OFF Switch (E) will turn off, indicating that the generator is no longer heating.

B: CONTINUE USING STEAM UNTIL ALL THE PRESSURE IS GONE

C: SWITCH THE (MAIN) ON/OFF SWITCH (D) TO THE OFF “—” POSITION

- The amber LED inside the (Main) ON/OFF Switch (D) will turn off, indicating that the generator is no longer active.

D: UNPLUG THE POWER CORD FROM THE 120V 3-PRONG OUTLET

- To continue cleaning, go back to steps 1-5 listed above.

OR: WHEN FINISHED CLEANING

A: SWITCH THE (HEATER) ON/OFF SWITCH (E) TO THE OFF “—” POSITION

B: CONTINUE USING STEAM UNTIL ALL THE PRESSURE IS GONE

C: SWITCH THE (MAIN) ON/OFF SWITCH (D) TO THE OFF “—” POSITION

D: UNPLUG THE POWER CORD FROM THE 120V 3-PRONG OUTLET

E: LET COOL COMPLETELY, WIND POWER CORD, AND STORE IN A DRY PLACE

WARNING: Follow all weekly and monthly maintenance steps described in the manual.

APEX Steam™ Technologies
A Division of Pemberton Fabricators Inc.
P.O. Box 227
30 Indel Avenue
Rancocas, NJ 08073



Phone: 678-392-3699
Fax: 678-392-3928
www.apexsteam.com
sales@apexsteam.com

rev. 03012017